



BREATHE

Airbox Intake Cover Installation Guide

The installation of the Breathe airbox intake cover is not complex and is a direct replacement for the OEM Triumph cover with the exact same dimensions in the important places.

Installation & Tools required: Large flat blade screwdriver & 8mm socket/spanner.

1) Put your bike on the centre stand/paddock stand so you can access the left hand side cover.



2) Remove the left hand side cover from the your bike.



3) Remove the three 8mm bolts from OEM cover/snorkel.




4) Replace the OEM cover/snorkel with the Breathe cover and don't forget to swap the large sealing O ring from the OEM cover to the Breathe.



5) Replace the three OEM 8mm bolts in the Breathe cover and tighten to 3 Nm.

N.B. - This is only a guide, you must be fully competent with the tasks in hand, if you are not, have a fully qualified mechanic carry out these tasks. Triumph Twin Power Ltd. cannot be held responsible for any damage or injury you inflict on your bike, yourself or other people. - Triumph Twin Power - ©2007-2015

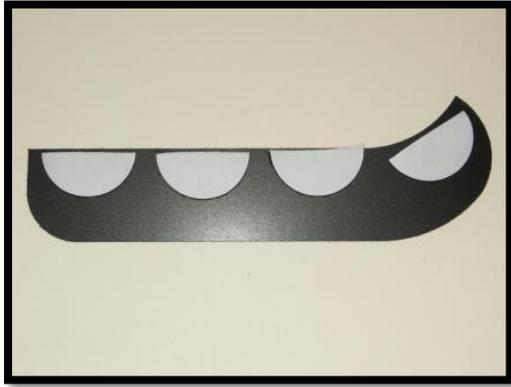

6) If you frequently ride in wet weather, then it's a good idea to fit the splash strip provided to the rear of the side panel. Clean the side panel where you will stick the strip and remove the backing paper on the splash strip stickies.



7) The splash strip should protrude from the side panel by 20mm.

8) Replace the left hand side panel. Job done!

N.B. The splash strip is for use with the Bonneville/T100, Thruxton and Scrambler only, it is not required for the America and Speedmaster.

Triumph America and Speedmaster Installation

Installation of the Breathe is very easy on the America or Speedmaster. You will need to remove the seat and the wiring cover on the top left of the airbox. Then remove the three 8mm bolts that hold the snorkel/intake cover in place and pull up to remove.



Install the Breathe in place of the OEM snorkel/intake cover and replace the three 8mm bolts and tighten to 3 Nm. Then replace the wiring cover and seat.

For maximum airflow, don't re-install the wiring cover, bolt the barometric pressure sensor to the cable cover bolt and arrange wiring around the Breathe as per the photo.

A longer bolt will be required and a spacer to ensure the barometric pressure sensor is open to free air.

N.B. - This is only a guide, you must be fully competent with the tasks in hand, if you are not, have a fully qualified mechanic carry out these tasks. Triumph Twin Power Ltd. cannot be held responsible for any damage or injury you inflict on your bike, yourself or other people. - Triumph Twin Power - ©2007-2015